


## INTERNATIONAL POWER SUPPLY CORDS



Europe



UK

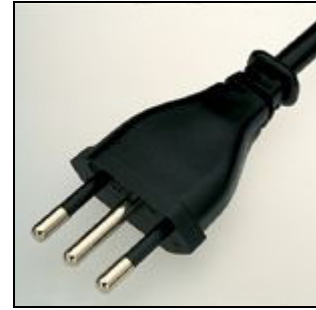

Italy

**ATTENTION!** Some power supplies require the input voltage to be manually switched from 115 to 220 VAC before operation. The factory default setting is 115 VAC. Select the proper input voltage before energizing the power supply. If a voltage selection switch is not present the power supply will automatically switch between input voltage settings.

Please remove the standard North American power supply cord and attach new wires according to the following diagram. The new power cord must be attached before applying power to the unit. Power requirements are listed on the power supply.

